



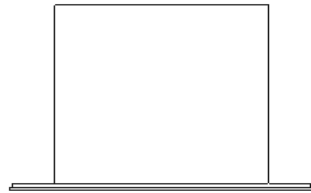

# ZE 41AP

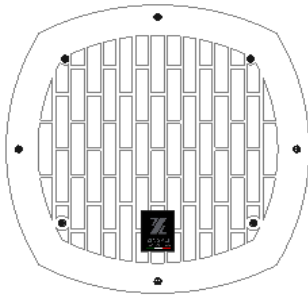

IT

EN





## IMPORTANT SAFETY INSTRUCTIONS



- Leggere queste istruzioni.
- Conservare queste istruzioni.
- Prestare attenzione a tutti gli avvertimenti.
- Seguire tutte le istruzioni.
- Non utilizzare questo apparecchio vicino all'acqua.
- Pulire solo con un panno asciutto.
- Utilizzare solo accessori/accessori specificati dal produttore.
- Non immergere l'apparecchio in acqua o liquidi.
- Non utilizzare spray aerosol, detergenti, disinfettanti o fumiganti sull'apparecchio.
- Non bloccare alcuna apertura di ventilazione. Installare in conformità con il produttore
- Mantenere l'apertura di ventilazione priva di polvere o altro.

### **MANUTENZIONE E RIPARAZIONE**

Zingali Acoustics SpA non è responsabile per eventuali lesioni, danni o danni connessi derivanti da un uso non corretto del dispositivo da parte del cliente, proprietario o utilizzatore del dispositivo.

### **GARANZIA**

L'altoparlante ZE41AP è stato progettato e realizzato secondo i più alti standard di qualità. Tuttavia, nell'improbabile eventualità che si verifichi un guasto o un malfunzionamento, l'altoparlante è comunque coperto da una garanzia di 24 mesi dalla data di acquisto. In questo caso ti invitiamo a contattare il rivenditore presso il quale hai effettuato l'acquisto.

## PREPARARE IL SOFFITTO

Posizionare l'anello di fissaggio sul controsoffitto e utilizzarlo come dima per effettuare il taglio. Fissare l'anello tramite le viti M4 x 25 in dotazione, inserendo la rondella e il dado, quindi serrare il tutto. (Fig. 1)

Collegare i fili al connettore Euroblock in dotazione e inserirlo nella presa Euroblock del diffusore e serrare il connettore alla presa tramite le due viti di tenuta.

Inserire il diffusore ZE41AP nella predisposizione creata e fissare il tutto tramite le viti M4 x 8 in dotazione (Fig. 2)

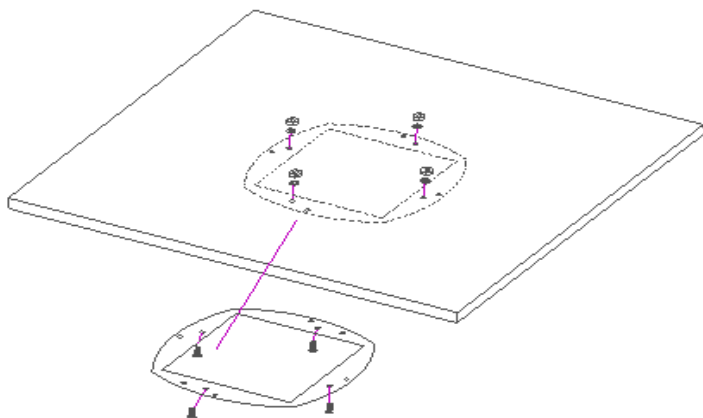


Fig. 1

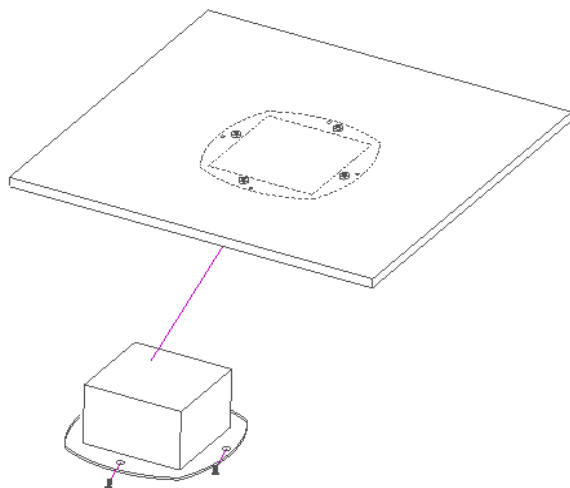


Fig. 2

Le connessioni del terminale Euroblock sono quelle della Fig. 3.

Se la connessione è unica si possono utilizzare indifferentemente I terminali di destra o quelli di sinistra.

Per una connessione multipla, seguire lo schema di collegamento come da Fig.4


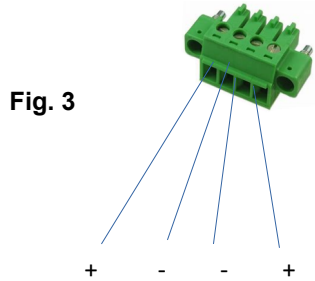


Fig. 3

Fig. 4

Parallel wiring diagram



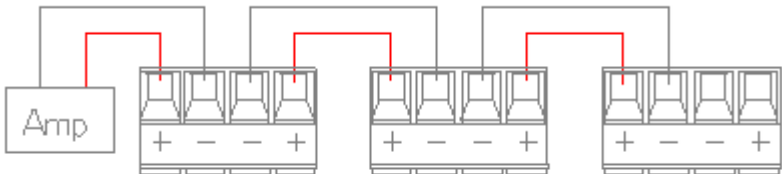



## IMPORTANT SAFETY INSTRUCTIONS



Read these instructions.

- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Only use attachments/accessories specified by the manufacturer.
- Do not submerge the apparatus in water or liquids.
- Do not use any aerosol spray, cleaner, disinfectant or fumigant on, into apparatus.
- Do not block any ventilation opening. Install in accordance with the manufacturer's instructions.
- Keep ventilation opening free of dust or other matter.

### **MAINTENANCE AND REPAIR**

Zingali Acoustics SpA is not responsible for any injury, damage or related damage resulting from incorrect use of the device by the customer, owner or user of the device.

### **WARRANTY**

The ZE41AP speaker has been designed and manufactured according to the highest quality standards. However, in the unlikely event that a fault or malfunction occurs, the speaker is still covered by a 24-month warranty from the date of purchase. In this case, please contact the retailer where you made your purchase.

## PREPARE THE CEILING

Place the fixing ring on the suspended ceiling and use it as a template to make the cut. Secure the ring using the supplied M4 x 25 screws, inserting the washer and nut, then tighten the whole thing. (Fig. 1)

Connect the wires to the supplied Euroblock connector and insert it into the Euroblock socket of the speaker and tighten the connector to the socket using the two sealing screws. Insert the ZE41AP diffuser into the predisposition created and fix everything using the M4 x 8 screws supplied (Fig. 2)

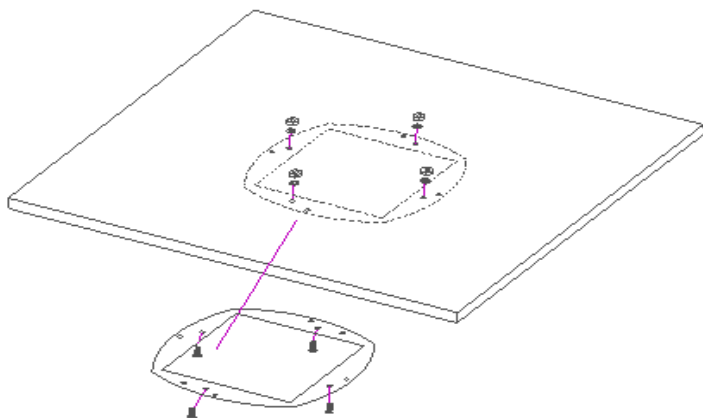


Fig. 1

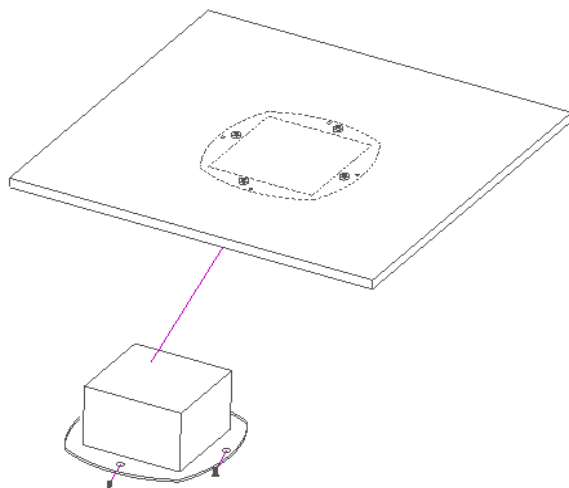


Fig. 2



The connections of the Euroblock terminal are those shown in Fig. 3.  
If the connection is unique, you can use either the right or the left terminals.  
For a multiple connection, follow the connection diagram as shown in Fig.4



Fig. 3

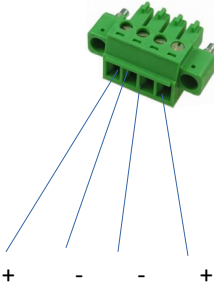


Fig. 4

Parallel wiring diagram



# ZE41AP

# ZE41APT

Technical specifications	Technical specifications
Type Passive loudspeaker - Bass Reflex	Type Passive loudspeaker - Bass Reflex – Built-in transformer
Transducer 4" neodymium magnet full range driver	Transducer 4" neodymium magnet full range driver
Frequency Response <sup>1</sup> 120 Hz - 15 kHz (-6dB)	Frequency Response <sup>1</sup> 120 Hz - 15 kHz (-6dB)
Sensitivity 87 dB ( 1W / 1 mt)	Sensitivity 87 dB ( 1W / 1 mt)
Max SPL <sup>2</sup> 110 dB Peak	Max SPL <sup>2</sup> 110 dB Peak
Power Handling 70 W (AES) – 140 W (CPP)	Power Handling 20 W with 100 V - 10 W with 70 V
Coverage V.90 I H.90°	Coverage V.90 I H.90°
Connectors 1x Phoenix connector (4-pin Euroblock)	Connectors 1x Phoenix connector (4-pin Euroblock)
Impedance <sup>3</sup> 8 Ω	
IP Rating IP64	IP Rating IP64

## DIMENSIONS

Handling & Finishes
Dimensions (HxWxD) 190 x 190 x 122 mm
Weight 1,2 kg (1,7Kg – ZE41APT)
Material Anticorodal aluminium
Color Black / White – RAL Color on request

1. With dedicated Preset
2. Maximum SPL is calculated at 1 m
3. 16Ω on request

# PRESET

I preset sono disponibili sul nostro sito.

The presets are available on our website.

© COPYRIGHT 2024  
Zingali Acoustics SpA  
World copyright  
reserved

